


Poly Perf Inmount 2-Sided Tape

A High Quality Optically Clear Mounting Adhesive. This unique “second surface” mounting solution has a Polyester film in the center with two optically clear pressure-sensitive adhesives on each side each protected by polyester release liners with differentiating finishes. Simply adhere Single or Two-sided printed Graphics to the permanent acrylic adhesive side (Gloss liner). Then apply to interior windows or other clear smooth surfaces by dry face mounting the other Siliconized adhesive side (Matte liner). The adhesive is easily repositionable and removable by nonprofessional installers

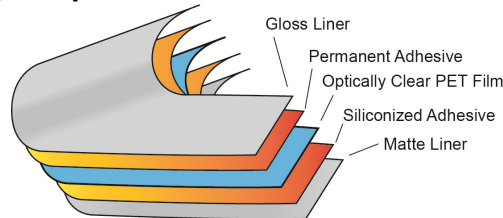

Layered Construction:

1. Inner face = **Gloss** 25 micron PET release liner.
2. Inner-middle = Permanent acrylic pressure sensitive adhesive.
3. Middle = 75 micron optically clear PET film.
4. Outer-middle = Optically clear silicone glue.
5. Outer face = **Matte** 50 micron PET release liner.

Key Features & Benefits:

- Unique Optically Clear Siliconized Low Tack adhesive allows for a dry and worry-free Install.
- Graphics can be installed by non-pro installer. Removes without leaving any adhesive residue
- Put-up, 54"x150' **Note; carrier liners have different finishes to indicate type of adhesive.**
- Shelf Life: 1 year (stored up to 25°C and 50% relative humidity), in original packing.

Applications:

- Use as a mounting adhesive where see-through or optically clarity is required such as Window advertisements or on other clear displays.
- Use with most printed materials
- For; POP/POS, Wayfinding, Tradeshow, Menu boards, Backlights and Photo/Art.

Optional Hinge Method Installation for larger graphics. (Note, graphics can be installed in single step by cleanly removing protective matte liner and then applying from top down):

1. The product should be installed dry to the inside of glass i.e. second surface.
 2. Use even, consistent application pressure and top down-center out movement when applying.
 3. Clean Glass with Alcohol. Do not install over Dirt, Dust or Edge chalking this will cause more bubbles.
 4. Align graphic to window with the protective liner facing toward glass and hinge with tape on the left and right edges about and 2 feet below top of the panel.
 5. Flip the top of graphic down and peel liner away from graphic to hinge point and cut just the liner away with razor knife slightly above hinge point.
 6. Start applying graphic to the glass by working up from hinge point with a felt squeegee.
 7. Once the top of the graphic is applied remove the tape on the left and right.
 8. To finish the application, now flip the bottom of the graphic up to the edge of the liner that was previously trimmed away. Peel the liner away from the graphic exposing another two feet of the graphic and apply to glass working from top down. Continue to apply to the glass in this manner until the entire graphic is installed.
-